



UNITED STATES


Kingston Support

Memory Install Guides

These instructions provide general installation and handling information for 184-pin DDR upgrade memory. These instructions are intended to be used in conjunction with your model-specific owner's manual.

INSTALLATION PROCEDURE

1. Place the computer's power switch in the "off " position and disconnect the AC power cord.
2. Remove the computer's top cover following the instructions in the model-specific owner's manual.
3. Before touching any electronic components, make sure you first touch an unpainted, grounded metal object to discharge any static electricity stored on your clothing or body.
4. Locate the memory expansion sockets on the computer's motherboard. If all the sockets are full, remove smaller capacity modules to allow room for higher capacity modules.
5. The ejector tabs shown in the illustration are used to remove a module. By pushing outward on the ejector tabs, the module will pop-up from the socket and it can then be removed.
6. Handle your new module(s) carefully; do not flex or bend the module(s). Always grasp the module by its edges.
7. For most installations, DDR modules can be installed in any available expansion slot. Other installations may require the memory to be installed in a particular sequence based on the modules capacity. Check your owner's manual to determine the correct installation sequence for your configuration.
 - Insert the module into an available expansion socket. Note how the module is keyed to the socket. This ensures the module can be plugged into the socket one way only. Firmly press the module into position, making certain the module is completely seated in the socket. The ejector tabs at each end of the socket will automatically snap into the locked position. Repeat this procedure for any additional modules you are installing.

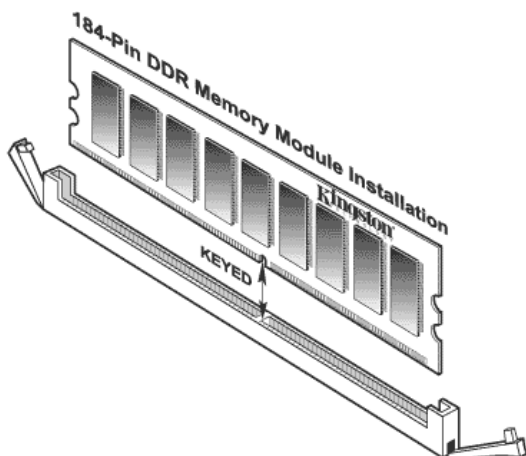

8. Once the module or modules have been installed, the computer's top cover can be reinstalled.
9. Plug in the AC power cord and reinstall any cables disconnected during the installation process.
10. Turn on the computer and follow the instructions in your computer owner's manual that describe the steps necessary to allow your computer to recognize the newly installed memory.

KINGSTON'S LEGENDARY QUALITY

Backed by superior design and rigorous testing, Kingston products are engineered for long-life and continuing value. To further our commitment to quality, all our products are 100% tested and backed by free technical support.

LIFETIME WARRANTY

Kingston warrants that this product is free from defects in material and workmanship. Subject to the conditions and limitations set forth below, Kingston will, at its option, either repair or replace any part of this product that proves defective by reason of improper workmanship or materials. Repair parts or replacement products will be provided by Kingston on an exchange basis, and will be either new or refurbished to be functionally equivalent to new. This warranty does not cover any damage to this product that results from accident, abuse, misuse, natural or personal disaster, or any unauthorized disassembly, repair or modification.

WARRANTY CLAIM REQUIREMENTS

To obtain warranty service, return the defective product, freight prepaid and insured, to your local authorized Kingston dealer or distributor, or to the Kingston factory service center located at 17600 Newhope Street, Fountain Valley, California 92708, U.S.A. You must include the product serial number (if applicable) and a detailed description of the problem you are experiencing. You must also include proof of the date of original retail purchase as evidence that the product is within the applicable warranty period. If you return the product directly to the Kingston factory, you must first obtain a Return Material Authorization ("RMA") number by calling Kingston Customer Service at (800) 435-0640, and include the RMA number prominently displayed on the outside of your package. Products must be properly packaged to prevent damage in transit.

TECHNICAL SUPPORT

Kingston provides free technical support. If you experience any difficulty during the installation or subsequent use of a Kingston product, please contact Kingston's Technical Support department prior to servicing your system.

This warranty covers only repair or replacement of defective Kingston products, as provided above. Kingston is not liable for, and does not cover under warranty, any costs associated with servicing and/or the installation of Kingston products.

DISCLAIMERS

The foregoing is the complete warranty for Kingston products and supersedes all other warranties and representations, whether oral or written. Except as expressly set forth above, no other warranties are made with respect to Kingston products and Kingston expressly disclaims all warranties not stated herein, including, to the extent permitted by applicable law, any implied warranty of merchantability or fitness for a particular purpose. In no event will Kingston be liable to the purchaser, or to any user of the Kingston product, for any damages, expenses, lost revenues, lost savings, lost profits, or any other incidental or consequential damages arising from the purchase, use or inability to use the Kingston product, even if Kingston has been advised of the possibility of such damages.

© 2008 Kingston Technology Corporation - All Rights Reserved